



ATOP Technologies, Inc.

Protocol Gateway DNP3.0 Client/Server

Protocol and
eNode Designer configuration

eNode Configuration Manual

V1.6

November 20th, 2024

This PDF Document contains internal hyperlinks for ease of navigation.
For example, click on any item listed in the [Table of Contents](#) to go to that page.

- [Configuration Guide](#)
 - [Interoperability](#)
-

Published by:

ATOP Technologies, Inc.

2F, No. 146, Sec. 1, Tung-Hsing Rd,
30261 Zhubei City, Hsinchu County
Taiwan, R.O.C.

Tel: +886-3-550-8137
Fax: +886-3-550-8131
www.atoponline.com
www.atop.com.tw

Important Announcement

Copyright

© 2005-2023 SystemCORP

© 2016-2023 ATOP Technologies, Inc.

The information contained in this document is the property of ATOP technologies, Inc., and is supplied for the sole purpose of operation and maintenance of ATOP Technologies, Inc., products.

No part of this publication is to be used for any other purposes, and it is not to be reproduced, copied, disclosed, transmitted, stored in a retrieval system, or translated into any human or computer language, in any form, by any means, in whole or in part, without the prior explicit written consent of ATOP Technologies, Inc.,

Offenders will be held liable for damages and prosecution.

All rights, including rights created by patent grant or registration of a utility model or design, are reserved.

Disclaimer

We have checked the contents of this manual for agreement with the hardware and the software described. Since deviations cannot be precluded entirely, we cannot guarantee full agreement. However, the data in this manual is reviewed regularly and any necessary corrections will be included in subsequent editions.

Suggestions for improvement are welcome.

All other product's names referenced herein are registered trademarks of their respective companies.

Documentation Control

Author:	Charlie Yeh
Revision:	1.6 update
Revision History:	Fix typo
Creation Date:	12 April 2017
Last Revision Date:	20 November 2024
Reviewer	Simon Huang
Product Reference:	PG59XX Protocol Gateways
Document Status:	Released

Table of Contents

1	Introduction	6
1.1	Scope	6
1.2	Document Reference.....	6
1.3	List of Abbreviations	6
2	General Description	8
2.1	Configuration Theory.....	8
2.2	General Screen Description	9
3	DNP3 Configuration Guide.....	10
3.1	Adding the Module in eNode Designer.....	10
3.2	Server IED Properties	10
3.2.1.1	Slave Address	11
3.2.1.2	IP Address	11
3.2.1.3	IP Port.....	11
3.3	Client Configuration	12
3.3.1	Client Settings.....	13
3.3.1.1	Master Address	13
3.3.1.2	Communication Medium	13
3.3.1.3	Link Layer Timeout (ms).....	錯誤! 尚未定義書籤。
3.3.1.4	Application Layer Timeout (ms)	13
3.3.1.5	Class 0, 1, 2, 3 Poll Interval (ms).....	14
3.3.1.6	Class 0 Poll Interval (ms).....	14
3.3.2	Adding Data Points	13
3.3.3	Servers (Remote IEDs)	16
3.4	Server Configuration.....	17
3.4.1	Server Settings	18
3.4.1.1	Master Address	18
3.4.1.2	Communication Medium	20
3.4.1.3	Enable Self Address.....	18
3.4.1.4	Class {X} Event Buffer Size	19
3.4.1.5	Class {X} Event Buffer Overflow Percentage	19
3.4.1.6	Default Static Variations	19
3.4.1.7	Default Event Variations	19
3.4.2	Adding Data Point References	21
3.5	Miscellaneous Common	22
3.5.1	Incomplete, Conflicting and not needed Information	22
3.5.2	Modify Selected Points Window	23
4	Communication Port Properties	24
5	Using Auto-increment Counters	25
5.1	Automatic Increments in Constant Values	錯誤! 尚未定義書籤。
6	Reference Guide	27
6.1	Table Buttons	27
6.2	Table Columns	27
6.2.1.1	Tag.....	27
6.2.1.2	Groups	27
6.2.1.3	Start Address.....	27
6.2.1.4	Count	28

6.2.1.5	Operation Mode	28
6.2.1.6	Analog Input Deadband	28
6.2.1.7	SBO Timeout (ms)	28
6.3	DNP3's Related ADH Types	28
7	DNP3 Client Properties	30
7.1	Device Profile	30
7.2	Implementation Table	33
8	DNP3 Server Properties	48
8.1	Device Profile	48
8.2	Implementation Table	52

Table of Figures

Figure 2-1	- Example Screen	9
Figure 3-1	- Adding the module in eNode Designer.	10
Figure 3-2	- Client settings panel (serial above; Ethernet below).....	12
Figure 3-3	- Client IED panel (Ethernet).....	12
Figure 3-4	- Add data points window.	15
Figure 3-5	- Multiple connected servers example	16
Figure 3-6	- Add a connected server.	16
Figure 3-7	- Remove a connected server.	16
Figure 3-8	- Server settings panel extract.	17
Figure 3-9	- Server IED panel.	18
Figure 3-10	- Add new references window.	21
Figure 3-11	- Data point references added.	21
Figure 3-13	- Modify data points window example.....	23
Figure 4-1	- Serial port properties.	24
Figure 4-2	- Ethernet port properties.	24

1 Introduction

Thank you for Buying ATOP's Protocol Gateway.

The product is bundled with the following three user manuals:

- 1) Hardware specific installation user manual, **not covered in this document**. It covers ATOP's hardware installation procedure, wiring, power connection etc.
- 2) Getting started with ATOP's Protocol Gateway user manual – configuration tool introduction, web configuration, software architecture introduction– **not covered in this document**. This manual covers the introduction, installation, network set-up maintenance and using of the configuration tool software, including the procedure to be followed for uploading new configurations to ATOP's device.
- 3) Protocol specific user manual (**This Manual**). **One protocol-specific manual will be provided for each protocol installed on the device**. This manual covers:
 - a. Basic device network configuration
 - b. Step-by-step protocol set-up for in eNode designer
 - c. Description of the protocol-specific software features, the device profile and the implementation table of supported functionalities.

This manual is for **DNP3.0 Client/Server** and describes how to use the **DNP3 eNode Designer Module** to configure ATOP's *DNP3 ADH Application* within the eNode Designer configuration tool.

1.1 Scope

This document is divided into 3 major sections:

- **General Description;**
- **Configuration Guide;** and
- **DNP3.0 Client Device Profile/ Implementation table** and
- **DNP3.0 Server Device Profile/ Implementation table**

1.2 Document Reference

- [1] Document Title: Getting started User Manual: 197-0100
Revision: Version 1.00 or higher
- [2] Document Title: DNP3 Specification
Revision: 2.05, 24th June 2009

1.3 List of Abbreviations

ADH	= Application Data Hub
DNP3	= Distributed Network Protocol 3
IED	= Intelligent Electronic Device
IP	= Internet Protocol

TCP = Transmission Control Protocol

2 General Description

The DNP3 eNode Module can be used to configure the DNP3 ADH Application as a master or slave. For naming consistency across eNode Designer, the master is called a client, and the slave is called a server.

The DNP3 client can communicate with many DNP3 server IEDs, all of whose data point details can be configured using this module.

2.1 Configuration Theory

Most configuration properties describe a *server*. When configuring the ADH application server, you are configuring the properties of the server itself. ATOP protocol gateway supports one server application per protocol per port. When configuring the ADH Application client, you are describing the properties of all the remote servers with whom the client is communicating.

Configuring the protocol-specific information, such as object addresses, is handled in the module. This is explained in this document.

Communication port properties (such as Baud Rate) are configured on the communication port itself. The Device module handles the communication port properties, so heavy details are outside the scope of this document.

Port configuration instructions are provide in the eNode Designer general user manual.

Screenshots of the typical configuration method are anyway shown in section [4](#). The relevant properties of the communication ports automatically apply to the application. For example, in a DNP3 server application, the IP Address the application binds to is taken from the parent Ethernet port.

2.2 General Screen Description

A small configuration example is shown below to better help describe the layout of the screen.

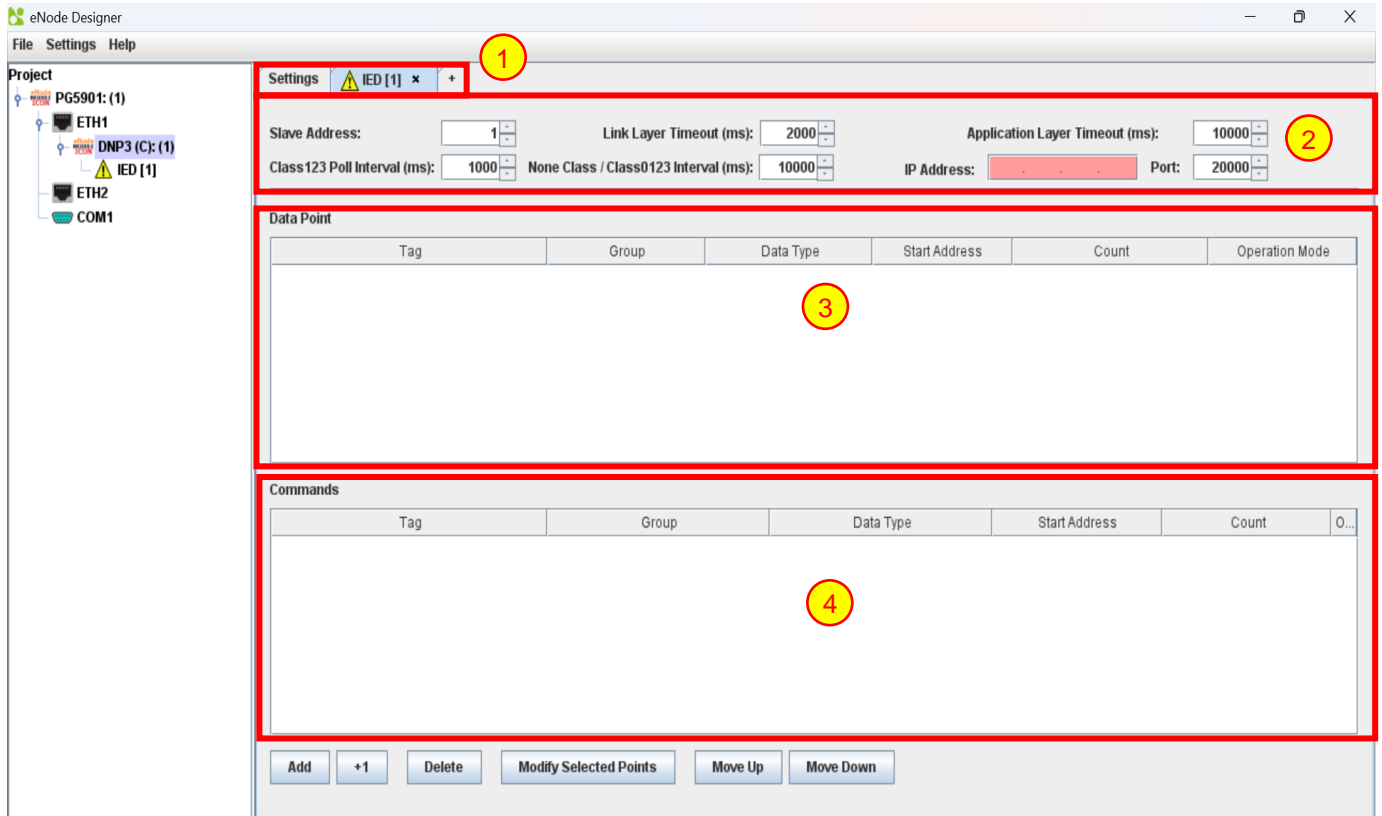


Figure 2-1 - Example Screen

- 1 **Tabs**
- 2 **Server IED Properties** – Describes the protocol-specific properties of the server IED.
- 3 **Data Table and buttons** – Shows all (information) data associated with the IED, and shows the buttons to be used to modify them.
- 4 **Commands Table and buttons** – Shows all commands associated with the IED, and shows the buttons to be used to modify them.

The user is able edit contents of the data and commands tables freely.

3 DNP3 Configuration Guide

3.1 Adding the Module in eNode Designer

The DNP3 module can be added to both *Ethernet* and *Serial* ports.

The application can be set up as a Client or a Server. The choice will be presented when adding it to the project.

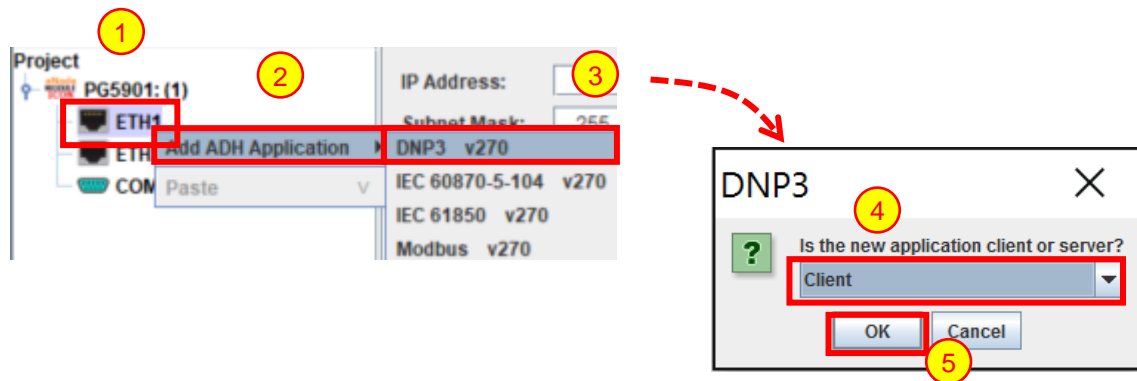


Figure 3-1 - Adding the module in eNode Designer.

- 1 Right click the desired **communication port**.
- 2 Open the **Add ADH Application** menu.
- 3 Select **DNP3**.
- 4 Select **Client** or **Server** from the drop-down menu.
- 5 Click **OK**.

3.2 Server IED Properties

The server IED properties are at the top of the module screen. The options available are limited to what is relevant for the communication port.

Serial port example:

Slave Address:

Ethernet port example:

Slave Address: IP Address: IP Port:

Each property is described in detail below.

3.2.1.1 Slave Address

Description	The slave address of the server IED. For servers it describes its own slave address. For clients, it describes the slave address of the remote server.
Data Entry	Integer
Range	0 to 65519
Input Option	Mandatory

3.2.1.2 IP Address

Ethernet and Client only

Description	The IP Address of the remote server IED. This option is only available in clients, since in servers, the IP Address is taken from the Ethernet port.
Data Entry	IP Address String
Range	Valid IPv4 Addresses (0.0.0.0 to 255.255.255.255)
Input Option	Mandatory

3.2.1.3 IP Port

Ethernet only

Description	The IP Port used by the server IED.
Data Entry	Integer
Range	1 to 65535. Default: 20000
Input Option	Mandatory

3.3 Client Configuration

Adding a DNP3 client application will immediately show the following figure. The first tab shows the settings that apply to the whole client application. Each tab after this shows a single DNP3 server with which the client is communicating. Each tab is named "IED [{X}]" where {X} is the slave address.

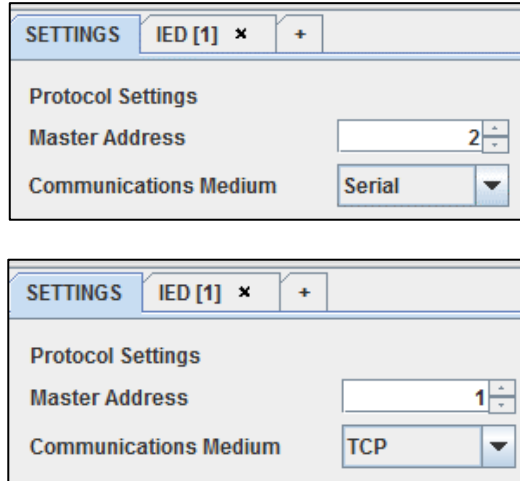


Figure 3-2 - Client settings panel (serial above; Ethernet below).

Selecting the IED tab will show the following view.

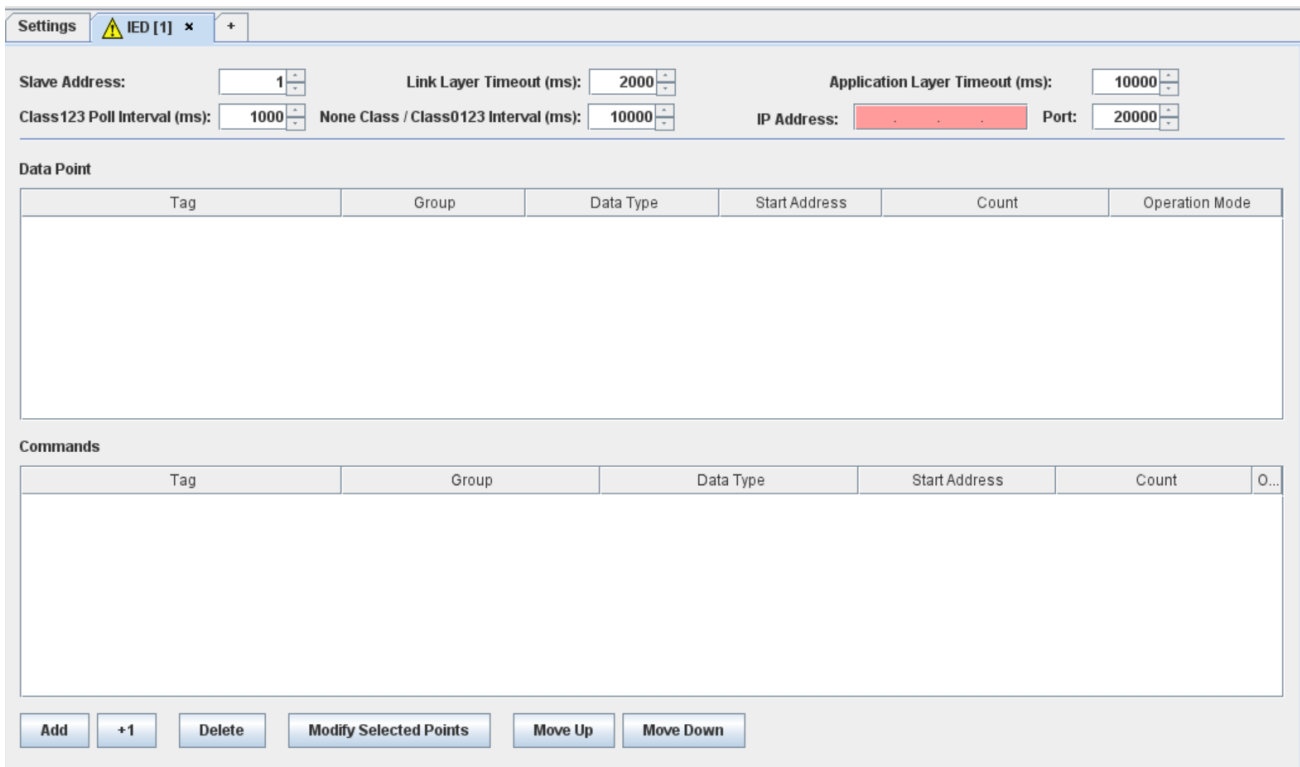


Figure 3-3 - Client IED panel (Ethernet).

Here the "Add" and "+1" button can be used to add data points. Adding data points is explained in the "Add data points" section, and the other buttons are described in section 6: Reference Guide.

3.3.1 Protocol Settings

3.3.1.1 Master Address

Description	The DNP3 master address to use.
Data Entry	Integer
Range	0 to 65519
Input Option	Mandatory

3.3.1.2 Communication Medium

Description	The communication method to use. The list will automatically be restricted based on the parent's port type.
Data Entry	Drop down menu
Options	Serial, TCP, UDP
Input Option	Mandatory

3.3.1.3 Enable Unsolicited After Connection Establish

Description	Whether the client enables the server's unsolicited message or not.
Data Entry	Checkbox
Types	Checked or not (default: checked)
Input Option	Mandatory

3.3.2 IED Settings

3.3.2.1 Slave Address

Description	The DNP3 address of IED to use.
Data Entry	Integer
Range	0 to 65519 (default: 1)
Input Option	Mandatory

3.3.2.2 Link Layer Timeout (ms)

Description	The timeout for a data link layer confirmation in milliseconds.
Data Entry	Integer
Range	100 to 65535 (default: 2000)
Input Option	Mandatory

3.3.2.3 Application Layer Timeout (ms)

Description	The timeout for an application layer confirmation in milliseconds.
Data Entry	Integer
Range	2000 to 65535 (default: 10000)
Input Option	Mandatory

3.3.2.4 Class 1, 2, 3 Poll Interval (ms)

Description	The poll interval of the event classes: class 1, 2 and 3. Every poll interval all event classes are polled. Measured in milliseconds.
Data Entry	Integer
Range	1000 to 65535 (default: 1000)
Input Option	Mandatory

3.3.2.5 None Class / Class 0123 Poll Interval (ms)

Description	The poll interval of static data and all events. Every poll interval all data is polled for its present value: class 0, 1, 2 and 3. Measured in milliseconds.
Data Entry	Integer
Range	1000 to 65535 (default: 10000)
Input Option	Mandatory

3.3.3 Adding Data Points

To add data points, left click the “Add” button beneath the tables in the main view. Doing so will show the following window. The window is used to add many data points at once with the specified values. For details on the meaning of each column, see section 6.2.

Add New Data Points [X]

Preview

Tag	Group	Start Address	Count	Operation Mode
Enable_Input1	Binary Input			Status Only
Enable_Input2	Binary Input			Status Only
Enable_Input3	Binary Input			Status Only
Enable_Input4	Binary Input			Status Only
Enable_Input5	Binary Input			Status Only
Enable_Input6	Binary Input			Status Only

New values

Tag	Group	Start Address	Count	Operation Mode
Enable_Input[X]	Binary Input			Status Only

Number of rows:

You can use "[X]" as an auto increment counter. [Y] and [Z] work similarly. Use [3X] to produce values like "001".

Define counter [X]	Define counter [Y]	Define counter [Z]
Start at: <input type="text" value="1"/> Step by: <input type="text" value="1"/>	Start at: <input type="text" value="1"/> Step by: <input type="text" value="1"/>	Start at: <input type="text" value="1"/> Step by: <input type="text" value="1"/>

Figure 3-4 - Add data points window.

- 1 **Preview Area** – Shows the preview of the data points that will be added.
- 2 **New values** – This area is used to enter values. Tag, Start Address and Count use manual data entry (click the box and type new values). Group, Operation Mode use drop-down menus. Entering an integer into the address column will start at that number and automatically increment in each successive point.
- 3 **Number of rows** – This counter can be used to add many data points at once.
- 4 **Automatic Counters** – These counters can be used to add many data points at once. The starting values and step values can be changed in this area. See also [5 Using Auto-increment Counters](#).
- 5 **OK button** – to accept the new data points.

3.3.4 Servers (Remote IEDs)

Each slave IED is represented by a single tab and a tree node in the eNode Designer project tree.

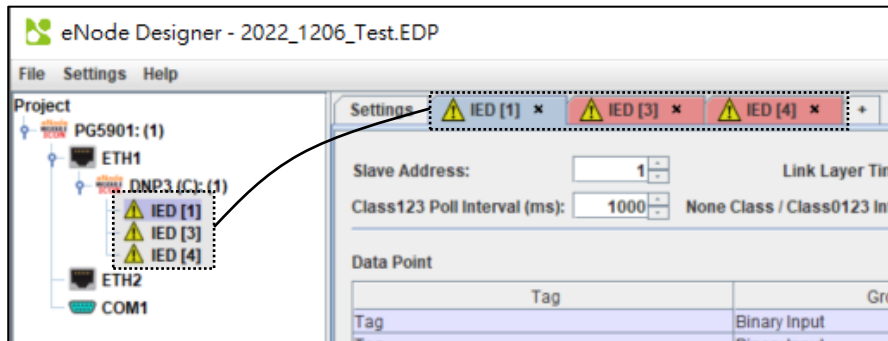


Figure 3-5 - Multiple connected servers example.

To modify the connected IEDs list follow the instructions below:

- 1 To **add** a new remote IED, click the "+" tab at the end of the existing remote server(s) list.

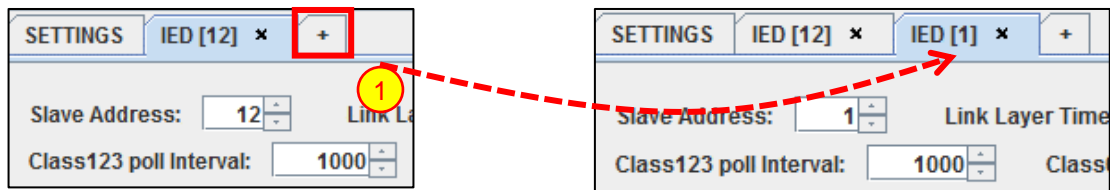


Figure 3-6 - Add a connected server.

To remove a remote IED, it must have no data points specified. If there are data points in the table and you still wish to remove the IED, you will have to remove such data points first.

- 1 To **remove** a remote IED, click the cross on the right side of the tab of the IED you wish to remove.


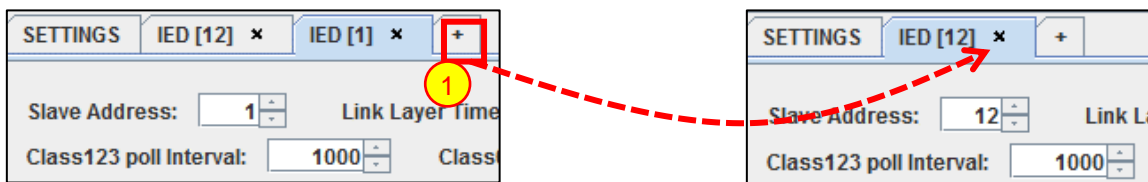


Figure 3-7 – Remove a connected server.

3.4 Server Configuration

A DNP3 server application outputs data from the ADH database, receives commands and passes them into the ADH system to command another application to perform the operation. Therefore, all server operations use data point *references* to already existing data points that have been created by other application clients or client-servers. ATOP protocol gateway supports one server application per protocol per device.

The options describe the local server itself. The settings tab can be used to set the local settings, while the IED tab is similar to the client-tab. Example figures of both are shown below.

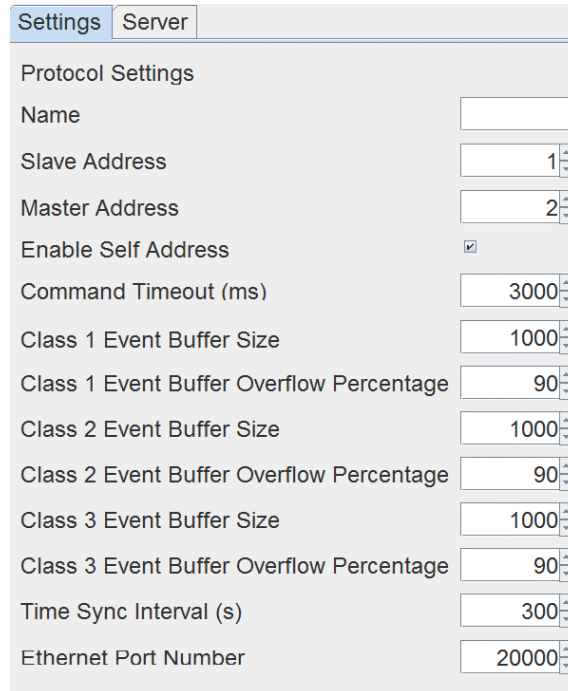

The screenshot shows a configuration window with two tabs: 'Settings' and 'Server'. The 'Settings' tab is active. Under the heading 'Protocol Settings', there are several configuration items:

Setting	Value
Name	
Slave Address	1
Master Address	2
Enable Self Address	<input checked="" type="checkbox"/>
Command Timeout (ms)	3000
Class 1 Event Buffer Size	1000
Class 1 Event Buffer Overflow Percentage	90
Class 2 Event Buffer Size	1000
Class 2 Event Buffer Overflow Percentage	90
Class 3 Event Buffer Size	1000
Class 3 Event Buffer Overflow Percentage	90
Time Sync Interval (s)	300
Ethernet Port Number	20000

Figure 3-8 - Server settings panel extract.

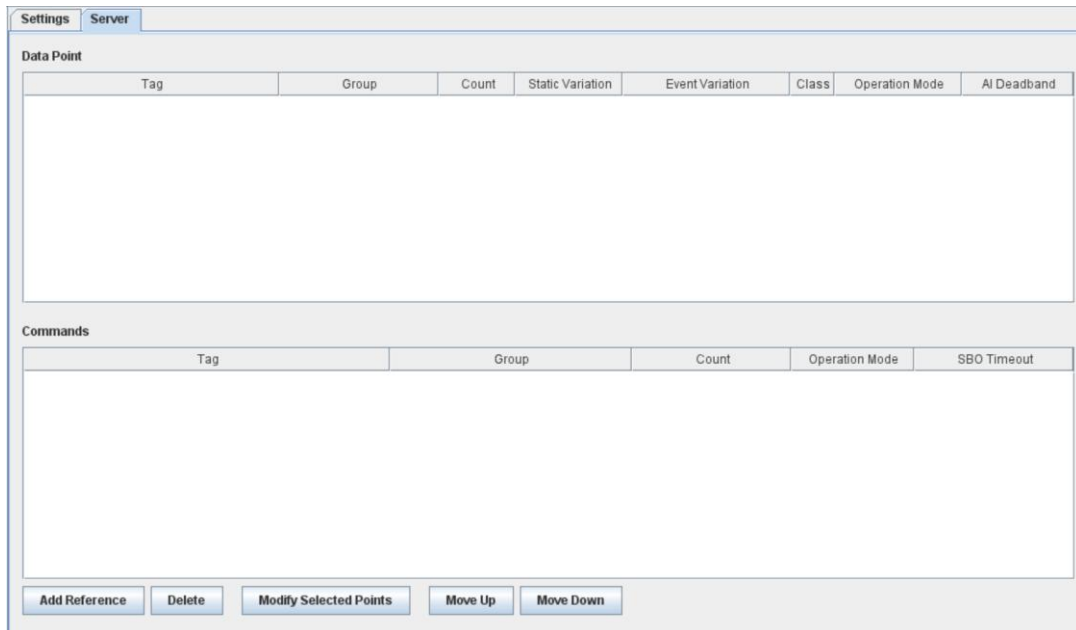


Figure 3-9 – Server IED panel.

Here the “Add Reference” button can be used to add data point references. The procedure is explained fully in the next section. The other buttons are described in section 6: Reference Guide.

3.4.1 Server Settings

All server settings are explained in the headings below.

3.4.1.1 Slave Address

Description	The DNP3 slave address to be used.
Data Entry	Integer
Range	0 to 65519
Input Option	Mandatory

3.4.1.2 Master Address

Description	The DNP3 master address to be used.
Data Entry	Integer
Range	0 to 65519
Input Option	Mandatory

3.4.1.3 Enable Self Address

Description	The value of the “Enable self address” flag when the application is started. When unsolicited responses are enabled, unsolicited messages may be sent.
Data Entry	Checkbox
Range	Checked or not (default: checked)
Input Option	Mandatory

3.4.1.4 Class {X} Event Buffer Size

Description	The buffer size for class {X}: the maximum number of events to store.
Data Entry	Integer
Range	10 - 65535
Input Option	Mandatory

3.4.1.5 Class {X} Event Buffer Overflow Percentage

Description	If the buffer for class {X} fills to this percentage, a buffer overflow event is sent to the master station.
Data Entry	Integer
Range	25-100. Recommended 50-95. Default: 90
Input Option	Mandatory

3.4.1.6 Default Static Variations

Description	The default static variations.	
Data Entry	Drop down menus	
Options	Binary Input	"Packeted Format", "With Flags"
	Double Binary Input	"Packeted Format", "With Flags"
	Binary Output	"With Flags"
	Counter Input	"32-bit With Flag", "16-bit With Flag", "32-bit Without Flag", "16-bit Without Flag"
	Frozen Counter Input	"32-bit With Flag", "16-bit With Flag", "32-bit With Flag and Time", "16-bit With Flag and Time", "32-bit Without Flag", "16-bit Without Flag"
	Analog Input	"32-bit With Flag", "16-bit With Flag", "32-bit Without Flag", "16-bit Without Flag", "Single-prec Flt-pt With Flag"
	Analog Input Deadband	"16-bit", "32-bit", "Single-prec Flt-pt"
	Analog Output	"32-bit With Flag", "16-bit With Flag", "Single-prec Flt-pt With Flag"
Input Option	Mandatory	

3.4.1.7 Default Event Variations

Description	The default event variations.	
Data Entry	Drop down menus	
Options	Binary Input	"Without Time", "With Absolute Time", "With Relative Time"
	Double Binary Input	"Without Time", "With Absolute Time", "With Relative Time"

Input Option	Counter Input	"32-bit With Flag", "16-bit With Flag", "32-bit With Flag and Time", "16-bit With Flag and Time"
	Analog Input	"32-bit Without Time", "16-bit Without Time", "32-bit With Time", "16-bit With Time", "Single-prec Flt-pt Without Time", "Single-prec Flt-pt With Time"
	Frozen Counter Input	"32-bit With Flag", "16-bit With Flag", "32-bit With Flag and Time", "16-bit With Flag and Time"
Input Option		Mandatory

3.4.1.8 Communication Medium

Description	The communication method to be used. The list will automatically be restricted based on the parent's port type.
Data Entry	Drop down menu
Options	TCP, UDP
Input Option	Mandatory

3.4.2 Adding Data Point References

To add new data point references, left click the “Add Reference” button underneath the tables in the main view. This will bring up the Add References window defined by the eNode Designer main application. It should appear similar to the following figure. Here we are adding references to data points created by an IEC 60870-5-104 client.

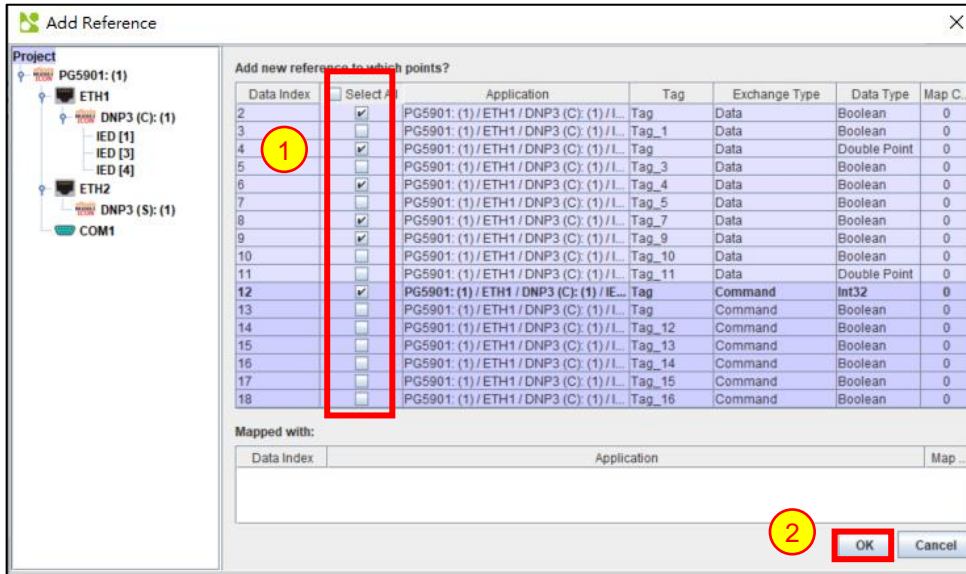


Figure 3-10 - Add new references window.

- 1 **Select Data Points** – Adding a reference to a point creates a “mapping” to that point. Select which data points the server application is interested in using.
- 2 Left Click **OK** when done to accept the new references.

The data points that will appear in the list and that will be available for mapping are those whose data point type is compatible with the DNP3 application. For the table matching DNP3 data types to ADH types, see section 0.

Data Point		Group	Count	Static Variation	Event Variation	Class	Operation Mode	AI Deadband
Tag		Binary Input	1	With Flags	Without Time	CLASS_0	Status Only	0
Tag_1		Binary Input	1	With Flags	Without Time	CLASS_0	Status Only	0
Tag_8		Binary Input	1	With Flags	Without Time	CLASS_0	Status Only	0
Tag_9		Binary Input	1	With Flags	Without Time	CLASS_0	Status Only	0

Commands		Group	Count	Operation Mode	SBO Timeout
Tag_10		Binary Output	1	Direct Operate/SBO	1000



Figure 3-11 - Data point references added.

All properties will be automatically defined based on the data point’s values.

3.5 Miscellaneous Common

3.5.1 Incomplete, Conflicting and not needed Information

Incomplete or conflicting information is shown in red, and will cause warning symbols on the tab and in the project tree. Hovering over the warning icons will show further details about the cause of the warning. This allows the user to quickly fix invalid information.

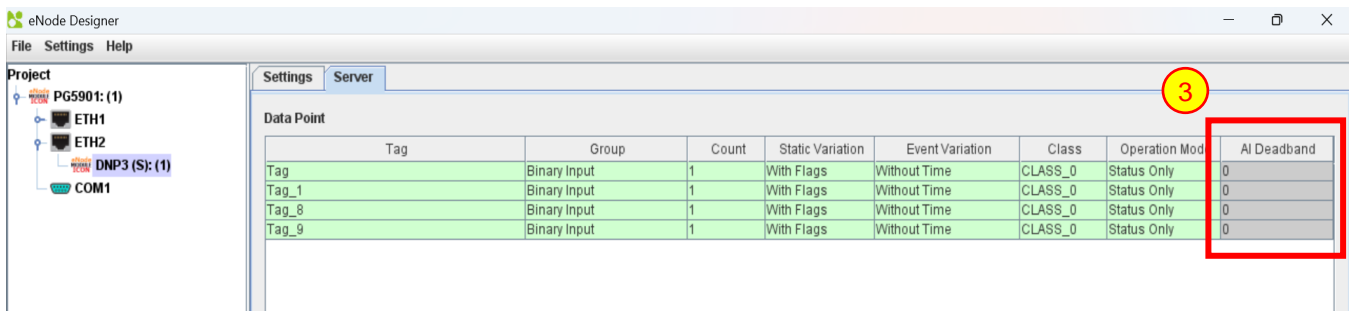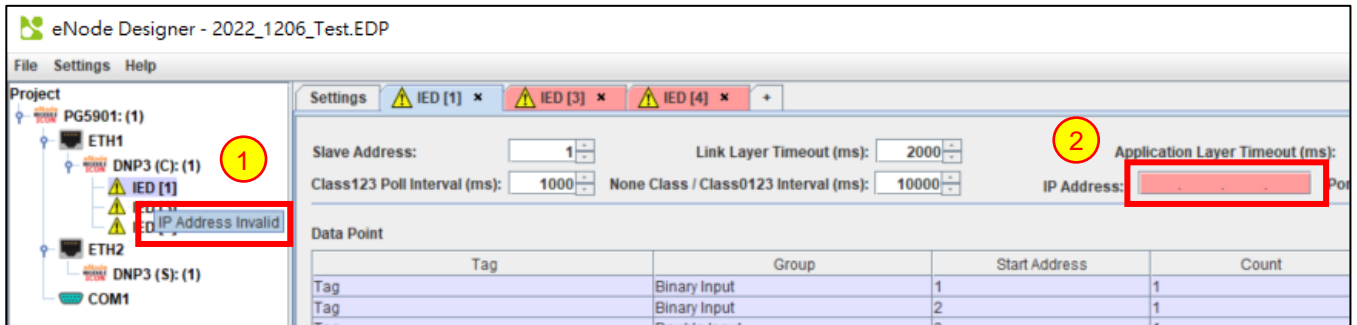

- 1 **Mouse-over a warning** to show a tooltip explaining the warning.
- 2 **Invalid Data** shows in red. The darker red means the data is invalid, and the lighter red means there is an address conflict.
- 3 **Unneeded Data** is hidden and not editable. For example, the SBO timeout is not required for direct operates. These table cells have a grey background, no contents and cannot be edited.

3.5.2 Modify Selected Points Window

The “Modify Selected Points” window is used to change many row properties in one single step.

Select the data points you want to change, and then press the “Modify Selected Points” button beneath the tables. It will generate the following window.

Rename Points

Original

Tag	Function	Data Type	Start Addr...	Count	Poll Time ...	Data Swap / Invert	AI Deadband
Tag_1	Read Coils	Boolean	0	1	1000	No Invert	0
Tag_8	Read Coils	Boolean	1	1	1000	No Invert	0
Tag_9	Read Coils	Boolean	2	1	1000	No Invert	0

Preview

Tag	Function	Data Type	Start Addr...	Count	Poll Time ...	Data Swap / Invert	AI Deadband
Tag_1	Read Coils	Boolean	0	1	1000	No Invert	0
Tag_8	Read Coils	Boolean	1	1	1000	No Invert	0
Tag_9	Read Coils	Boolean	2	1	1000	No Invert	0

New values

Tag	Function	Data Type	Start Addr...	Count	Poll Time ...	Data Swap / Invert	AI Deadband
[N]	Read Coils	Boolean	[N]	1	1000	No Invert	0

You can use "[N]" as the original text of the cell.
 You can use "[X]" as an auto increment counter. [Y] and [Z] work similarly. Use [3X] to produce values like "001".

Define counter [X] Define counter [Y] Define counter [Z]

Start at: Step by: Start at: Step by: Start at: Step by:

OK Cancel

Figure 3-12 - Modify data points window example.

- 1 **Original data table** – Shows the original data table.
- 2 **Preview** – Shows the new data table that will be used if the modifications are accepted. These fields update automatically according to the contents of (3).
- 3 **New values** – Contain the new values for the table cells. “[N]” can be used to maintain the original value of the cell, and the auto-incrementing counters [X], [Y] and [Z] can be used to add numbers. For details, see [Using Auto-increment](#).
- 4 **Counter properties** – Sets the initial values and step amounts of the counters [X], [Y] and [Z].
- 5 **OK button** – to accept the modifications.

Data point references always use the *tag* of the “real” point. Consequently, these values will not be changed by a server application. The object addresses in the server are required to be contiguous, so the addresses cannot be changed using this window either. See server configuration for details.

4 Communication Port Properties

The device module handles the communication port properties. The typical method is described briefly below.

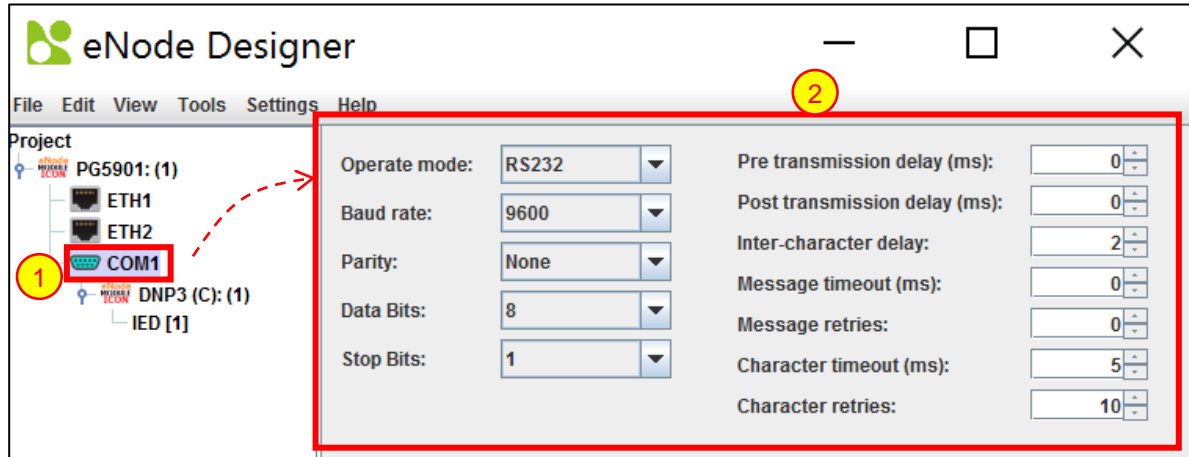


Figure 4-1 - Serial port properties.

- 1 Select the communication port in the project tree – This will typically cause the central panel to show the port's properties.
- 2 Properties – The communication port's properties can be set.

Similarly, the Ethernet properties are shown below.

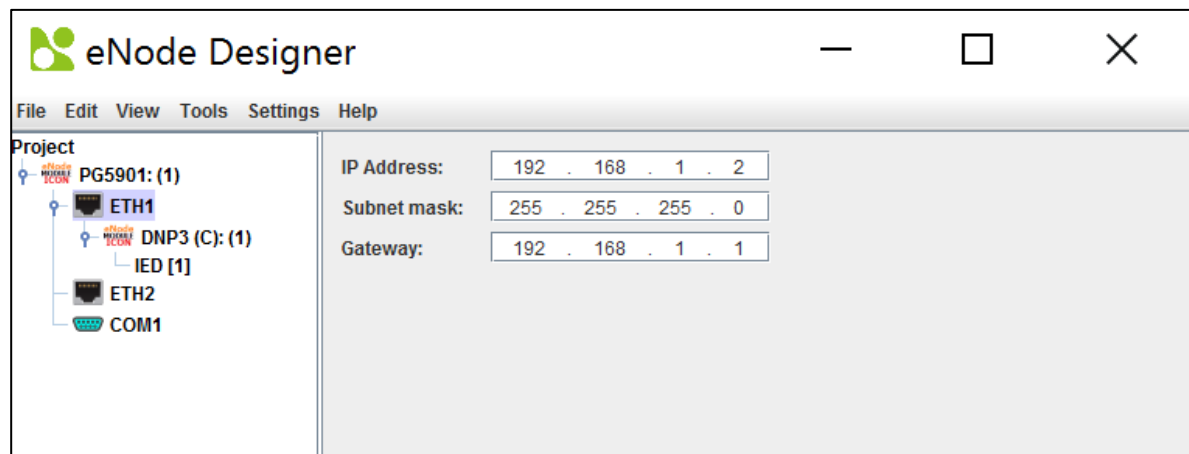


Figure 4-2 – Ethernet port properties.

5 Using Auto-increment Counters

The following is a full example showing how auto-increment works. The example given shows the IEC 60870-5-104 window, however the DNP3 auto-increment works in the same way.

Add New Data Points

Preview

Tag	Group	Start Address	Count	Operation Mode
example_tag_0	Binary Input	0	1	Status Only
example_tag_2	Binary Input	10	2	Status Only
example_tag_4	Binary Input	20	3	Status Only
example_tag_6	Binary Input	30	4	Status Only
example_tag_8	Binary Input	40	5	Status Only

New values

Tag	Group	Start Address	Count	Operation Mode
example_tag_[X]	Binary Input	[Y]	[Z]	Status Only

Number of rows:

You can use "[X]" as an auto increment counter. [Y] and [Z] work similarly. Use [3X] to produce values like "001".

Define counter [X] Start at: Step by:

Define counter [Y] Start at: Step by:

Define counter [Z] Start at: Step by:

OK Cancel

Figure 5-1 – Using Auto Increment when adding Data Points or Commands.

- 1 The *Number of Rows* can be modified to set the number of data points or commands created from the *New values* section. As shown in the example above, five data points/commands are created and shown in the preview section as the *Number of Rows* is set to 5.

When using the auto increment counters by default, they will start at one and increment by one. Anyway auto-increment value has its own section for configuration. Adjusting *Start At* will change the value that the first data point/command receives. Adjusting *Step By* will change the value that the second and subsequent values will be incremented by.

- 2 In this example, the [X] counter is used. The *Start At* value has been set to 0 and the *Step By* value has been set to 2. This results in the values seen in the preview section.

It is also possible to include a number within the square brackets and before the X, Y or Z while using auto increment. This will produce values that contain the entered number of digits. Any digit that is not taken up by the value determined by the *Start At* and *Step By* values will be shown as zeros.

- 3 In this example, the [Y] counter has been used with the integer 4 to indicate the number structure. This results in the values shown in the preview section.

4


In this example, the *[Z]* counter has been used. The *Start At* and *Step By* values have been left at default, this results in the values shown.

If no auto increment value is entered in any field, each data point/command field value will be created the same with the exception of *Tag* and *IOA*. The first new data point/command's *Tag* value will represent what was entered in the *New value* section. However, the subsequent data points/commands will contain the initial *Tag* value followed by an underscore and a number incrementing by one from 1 onwards. (Example: tag, tag_1, tag_2 etc.). This is an artefact of eNode Designer ensuring all data point tag names are unique.


6 Reference Guide

6.1 Table Buttons

Client Options:



Server Options:



<i>Add</i>	Adds new data points in the client. See section 3.3.2 .
<i>+1</i>	Adds a single new data point in the client. See section 3.3.2 .
<i>Add Reference</i>	Adds a new data point reference in the server. See section 3.4.2 .
<i>Delete</i>	Deletes the selected data points
<i>Modify Selected Points</i>	Modify the properties of the selected data points. See section 3.5.2 .
<i>Move Up</i>	Moves the selected data points up one row in the table
<i>Move Down</i>	Moves the selected data points down one row in the table

6.2 Table Columns

6.2.1.1 Tag

Description	A unique Tag name for each data point.
Data Entry	String
Min Length	1
Max Length	N/A
Input Option	Mandatory

6.2.1.2 Groups

Description	The DNP3 point type.
Data Entry	Drop Down Menu
Groups	<i>Binary Input, Double Input, Counter Input, Analog Input, Binary Output, Analog Output</i>
Input Option	Mandatory

6.2.1.3 Start Address

Description	The DNP3 starting <i>index</i> in the DNP3 point type.
Data Entry	Integer

Start Address	<i>n/a</i>
Count	<i>0 to 65535 (the max Address starting from "start addr"+"count" can't exceed 65535)</i>
Input Option	Mandatory

6.2.1.4 Count

Description	The request address
Data Entry	Integer
Options	0~65000
Input Option	Mandatory

6.2.1.5 Operation Mode

Description	Assigns the command type to a command point.
Data Entry	Drop down menu
Range	<i>Direct Operate, Select Before Operate</i>
Input Option	Mandatory for commands

6.2.1.6 AI Deadband

Server Data Only

Description	The dead-band of the Analog input. An event is triggered when the Analog input changes an amount greater than the deadband value.
Data Entry	Floating point number
Range	<i>0.0 or greater</i>
Input Option	Mandatory for Analog inputs

6.2.1.7 SBO Timeout (ms)

Server commands only

Description	The timeout to wait for a SBO (Select before operate) to complete in milliseconds.
Data Entry	Integer
Range	<i>0 to 65000</i>
Input Option	Mandatory if command type is <i>Select Before Operate</i>

6.3 DNP3's Related ADH Types

The DNP3 data types correspond to the ADH types given in the table below.

DNP3 Point Type	ADH Data Type	ADH Exchange Type
Binary Input	Single Point	Data

Double Input	Double Point	Data
Counter Input	Unsigned 32	Data
Analog Input	Float 32	Data
Binary Output	Single Point	Command
Analog Output	Float 32	Command

Table 6-1 – DNP3 data types relation to ADH data point types.

7 DNP3 Client Properties

7.1 Device Profile

<p><i>This document defines the options of the DNP3 protocol used by ATOP DNP3 devices and must be accompanied by an implementation table.</i></p>	
<p>Vendor Name: ATOP Technologies, Inc.</p>	
<p>Device Name: PG59XX Series DNP3 Server over Ethernet or Serial</p>	
<p>Device Function:</p> <ul style="list-style-type: none"> ■ Master Outstation 	
<p>DNP Levels Supported for: Request and Response</p> <ul style="list-style-type: none"> None ■ Level 1 ■ Level 2 Level 3 Level 4 	<p>Supported Function Blocks:</p> <ul style="list-style-type: none"> ■ Self-Address Support Data Sets File Transfer Virtual Terminals ■ Mapping to IEC61850 Object Models defined in a DNP3 XML file Function code 31, activate configuration Authentication
<p>Connections Supported:</p> <ul style="list-style-type: none"> ■ Serial ■ IP Networking 	
<p>Serial Connections:</p> <p>Serial Connection Parameters:</p> <ul style="list-style-type: none"> ■ Asynchronous – 8 Data Bits, 1 Start Bit, 1 Stop Bit, No Parity <p>Baud Rate:</p> <ul style="list-style-type: none"> fixed ■ Configurable – 110 to 115200 <p>Flow Control:</p> <ul style="list-style-type: none"> ■ None Hardware flow control Software flow control <p>Interval to Request Link Status:</p> <ul style="list-style-type: none"> ■ Not supported Fixed at seconds Configurable – 0 to 2147483647 <p>Supports DNP3 Collision Avoidance:</p> <ul style="list-style-type: none"> ■ No Yes, using back-off time = (Min + Random) method <p>Receiver Inter-character Timeout:</p> <ul style="list-style-type: none"> ■ Not checked No gap permitted 	

Fixed a bit times
Fixed a ms
Configurable

Inter-character Gap in Transmission:

- None
- Maximum bit times
- Maximum ms

IP Networking:

Type of End Point:

- TCP Initiating
- TCP Listening
- UDP datagram

TCP Listen Port Number:

- Fixed at 20000
- Configurable, range 1 to 65535 (default 20000)

TCP Keep-alive timer:

- Fixed at 19000 ms
- Configurable, range _____ to _____ ms

Local UDP Port:

- Fixed at 20000
- Configurable, range 1 to 65535 (default 20000)

Multiple Outstation Connections:

- Not supported
- Supports multiple outstations (maximum is 64)

Time Synchronization Support:

- Not supported
- DNP3 LAN Procedure
- DNP3 Write Time

Data Link Address:

- Fixed at 292
- Configurable, range 0 to 65519 (default 2)

Self-Address Support using address 0xFFFC:

- Yes
- No

Sends Confirmed User Data Frames:

- Never
- Sometimes, explain
- Always

Data Link Layer Confirmation Timeout:

- None
- Fixed at 2000 ms
- Configurable, range _____ to _____ ms

Maximum Data Link Retries:

- Never Retries
- Fixed at 3
- Configurable, range _____ to _____

Maximum number of octets Transmitted in a Data Link Frame:

- Fixed at 292
- Configurable, range _____ to _____

Maximum number of octets that can be Received in a Data Link Frame:

- Fixed at 292
- Configurable, range _____ to _____

<p><i>Maximum number of octets Transmitted in an Application Layer Fragment:</i></p> <ul style="list-style-type: none"> ■ Fixed at 2048 Configurable, range _____ to _____ 	<p><i>Maximum number of octets that can be Received in an Application Layer Fragment:</i></p> <ul style="list-style-type: none"> ■ Fixed at 249 Configurable, range _____ to _____
<p><i>Timeout waiting for Complete Application Layer Fragment:</i></p> <ul style="list-style-type: none"> None Fixed at 6000 ms ■ Configurable, range _1000_ to _65535_ ms 	
<p><i>Control Status Codes Supported:</i></p> <ul style="list-style-type: none"> 1 – TIMEOUT ■ 2 – NO_SELECT ■ 3 – FORMAT_ERROR ■ 4 – NOT_SUPPORTED ■ 5 – ALREADY_ACTIVE ■ 6 – HARDWARE_ERROR ■ 7 – LOCAL 8 – TOO_MANY_OBJS ■ 9 – NOT_AUTHORIZED ■ 10 – AUTOMATION_INHIBIT ■ 11 – PROCESSING_LIMITED ■ 12 – OUT_OF_RANGE 13 – DOWNSTREAM_LOCAL 14 – ALREADY_COMPLETE 15 – BLOCKED 16 – CANCELLED 17 – BLOCKED_OTHER_MASTER 18 – DOWNSTREAM_FAIL ■ 126 – RESERVED ■ 127 – UNDEFINED 	

7.2 Implementation Table

OBJECT		REQUEST (Library will parse)		RESPONSE (Library will respond with)		
Object	Variation	Description	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
1	0	Binary Input - All Variations (Variation 0 is used to request default variation)	1(Read), 22(Assign Class)	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129(Response)	00, 01 17, 28
1	1	Binary Input - Packed Format	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129,	00, 01 17, 28
1	2	Binary Input with Status	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129	00, 01 17, 28
2	0	Binary Input Change - All Variations (Default variation)	1	06,07,08	129	17, 28
2	1	Binary Input Change without Time	1	06,07,08	129, 130 (Unsolicited)	17, 28

OBJECT		REQUEST (Library will parse)		RESPONSE (Library will respond with)		
Object	Variation	Description	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
	2	Binary Input Change with Time	1	06,07,08	129, 130	17, 28
	2	Binary Input Change with Relative Time	1	06,07,08	129, 130	17, 28
3	0	Double-bit Binary Input - All Variations (Variation 0 is used to request default variation)	1(Read), 22(Assign Class)	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (index)	129(Response)	00, 01 17, 28
3	1	Double-bit Binary Input – Packed Format	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (index)	129,	00, 01 17, 28
3	2	Double-bit Binary Input	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (index)	129	00, 01 17, 28
4	0	Double-bit Binary Input Change - All Variations (Default variation)	1	06,07,08	129	17, 28

Object	Variation	Description	REQUEST (Library will parse)		RESPONSE (Library will respond with)	
			Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
4	1	Double-bit Binary Input Change without Time	1	06,07,08	129, 130 (Unsolicited Response)	17, 28
4	2	Double-bit Binary Input Change with Time	1	06,07,08	129, 130	17, 28
4	3	Double-bit Binary Input Change with Relative Time	1	06,07,08	129, 130	17, 28
10	0	Binary Output - All Variations	1(Read), 22(Assign Class)	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (index)	129	00, 01 17, 28
10	1	Binary Output	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (index)	129,	00, 01 17, 28
10	2	Binary Output Status	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (index)	129,	00, 01 17, 28

OBJECT		REQUEST (Library will parse)		RESPONSE (Library will respond with)		
Object	Variation	Description	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
12	0	Control Block - All Variations				
12	1	Control Relay Output Block	3(Select), 4(Operate), 5 (Direct Operate), 6 (Direct Operate NR)	17, 28	129	echo of request
20	0	Binary Counter - All Variations	1(Read), 22(Assign Class) 7(Immediate Freeze), 8 (Immediate Freeze - No Response), 9 (Freeze and Clear), 10 (Freeze and Clear – No Response)	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129	00, 01 17, 28
20	1	32-Bit Binary Counter	1,	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129,	00, 01 17, 28
20	2	16-Bit Binary Counter	1,	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129,	00, 01 17, 28

OBJECT		REQUEST (Library will parse)		RESPONSE (Library will respond with)		
Object	Variation	Description	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
20	5	32-Bit Binary Counter without Flag	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129,	00, 01 17, 28
20	6	16-Bit Binary Counter without Flag	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129,	00, 01 17, 28
21	0	Frozen Counters - All Variations	1(Read), 22(Assign Class)	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129(Response)	00, 01 17, 28
21	1	32-Bit Frozen Counter	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty)	129,	00, 01 17, 28

OBJECT		REQUEST (Library will parse)		RESPONSE (Library will respond with)		
Object	Variation	Description	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
				17, 28 (index)		
21	2	16-Bit Frozen Counter	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (index)	129,	00, 01 17, 28
21	5	32-Bit Frozen Counter with Time of Freeze	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (index)	129,	00, 01 17, 28
21	6	16-Bit Frozen Counter with Time of Freeze	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (index)	129,	00, 01 17, 28
21	9	32-Bit Frozen Counter without Flag	1	00, 01 (start-stop) 06 (no range, or all)	129,	00, 01 17, 28

OBJECT		REQUEST <small>(Library will parse)</small>		RESPONSE <small>(Library will respond with)</small>		
Object	Variation	Description	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
				07, 08, (limited qty) 17, 28 (index)		
21	10	16-Bit Frozen Counter without Flag	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (index)	129,	00, 01 17, 28
22	0	Counter Change Event - All Variations	1	06,07,08	129	17, 28
22	1	32-Bit Counter Change Event without Time	1	06,07,08	129, 130	17, 28
22	2	16-Bit Counter Change Event without Time	1	06,07,08	129, 130	17, 28
22	5	32-Bit Counter Change Event with Time	1	06,07,08	129, 130	17, 28
22	6	16-Bit Counter Change Event with Time	1	06,07,08	129, 130	17, 28
23	0	Frozen Counter Events - All Variations	1	06,07,08	129	17, 28
23	1	32-Bit Frozen Counter Event without Time	1	06,07,08	129, 130	17, 28

Object	Variation	Description	REQUEST <small>(Library will parse)</small>		RESPONSE <small>(Library will respond with)</small>	
			Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
23	2	16-Bit Frozen Counter Event without Time	1	06,07,08	129, 130	17, 28
23	5	32-Bit Frozen Counter Event with Time	1	06,07,08	129, 130	17, 28
23	6	16-Bit Frozen Counter Event with Time	1	06,07,08	129, 130	17, 28
30	0	Analog Input - All Variations	1(Read), 22(Assign Class) 7(Immediate Freeze), 8 (Immediate Freeze - No Response), 9 (Freeze and Clear), 10 (Freeze and Clear - No Response)	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129(Response)	00, 01 17, 28
30	1	32-Bit Analog Input	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129,	00, 01 17, 28
30	2	16-Bit Analog Input	1	00, 01 (start-stop) 06 (no range, or all)	129,	00, 01 17, 28

OBJECT		REQUEST (Library will parse)		RESPONSE (Library will respond with)		
Object	Variation	Description	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
				07, 08 (limited qty) 17, 28 (index)		
30	3	32-Bit Analog Input without flag	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 (limited qty) 17, 28 (index)	129,	00, 01 17, 28
30	4	16-Bit Analog Input without flag	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 (limited qty) 17, 28 (index)	129,	00, 01, 17, 28
30	5	Single-precision float –point with flag	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 (limited qty) 17, 28 (index)	129,	00, 01, 17, 28
31	0	Frozen Analog Input - All Variations	1(Read), 22(Assign Class)	00, 01 (start-stop)	129(Response)	00, 01,

OBJECT		REQUEST (Library will parse)		RESPONSE (Library will respond with)		
Object	Var iation	Description	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
				06 (no range, or all) 07, 08, (limited qty) 17, 28 (Index)		17, 28
31	1	32-Bit Frozen Analog Input	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (Index)	129,	00, 01, 17, 28
				00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (Index)	129,	00, 01, 17, 28
31	3	32-Bit Frozen Analog Input with Time of Freeze	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (Index)	129,	00, 01, 17, 28
31	4	16-Bit Frozen Analog Input with Time of	1		129,	

OBJECT		REQUEST <small>(Library will parse)</small>		RESPONSE <small>(Library will respond with)</small>		
Object	Variation	Description	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
		Freeze		00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (index)		00, 01, 17, 28
31	5	32-Bit Frozen Analog Input without Flag	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (index)	129,	00, 01, 17, 28
31	6	16-Bit Frozen Analog Input without Flag	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (index)	129,	00, 01, 17, 28
31	7	Single-precision float –point with flag	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (index)	129,	00, 01, 17, 28

Object	Variation	Description	REQUEST (Library will parse)		RESPONSE (Library will respond with)	
			Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
32	0	Analog Change Event - All Variations	1	06,07,08	129	17, 28
32	1	32-Bit Analog Change Event without Time	1	06,07,08	129, 130	17, 28
32	2	16-Bit Analog Change Event without Time	1	06,07,08	129, 130	17, 28
32	3	32-Bit Analog Change Event with Time	1	06,07,08	129, 130	17, 28
32	4	16-Bit Analog Change Event with Time	1	06,07,08	129, 130	17, 28
32	5	Single-precision, float -point Analog Change Event with out Time	1	06,07,08	129, 130	17, 28
32	7	Single-precision, float -point Analog Change Event with Time	1	06,07,08	129, 130	17, 28
33	0	Frozen Analog Event - All Variations	1	06,07,08	129	17, 28
33	1	32-Bit Frozen Analog Event without Time	1	06,07,08	129, 130	17, 28

OBJECT		REQUEST <small>(Library will parse)</small>		RESPONSE <small>(Library will respond with)</small>		
Object	Variation	Description	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
33	2	16-Bit Frozen Analog Event without Time	1	06,07,08	129, 130	17, 28
33	3	32-Bit Frozen Analog Event with Time	1	06,07,08	129, 130	17, 28
33	4	16-Bit Frozen Analog Event with Time	1	06,07,08	129, 130	17, 28
33	5	Single-precision float-point Frozen Analog Change Event with out Time	1	06,07,08	129, 130	17, 28
33	7	Single-precision float-point Frozen Analog Change Event with Time	1	06,07,08	129, 130	17, 28
40	0	Analog Output Status - All Variations	1(Read), 22(Assign Class)	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129(Response)	00, 01, 17, 28
40	1	32-Bit Analog Output Status	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty)	129,	00, 01, 17, 28

OBJECT		REQUEST <small>(Library will parse)</small>		RESPONSE <small>(Library will respond with)</small>		
Object	Variation	Description	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
				17, 28 (index)		
40	2	16-Bit Analog Output Status	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (index)	129,	00, 01, 17, 28
40	3	Single-precision float –point Analog Output Status	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (index)	129,	00, 01, 17, 28
41	1	32-Bit Analog Output Block	3, 4, 5, 6	17, 28	129	echo of request
41	2	16-Bit Analog Output Block	3, 4, 5, 6	17, 28	129	echo of request
41	3	Analog Output – Single-precision float – point	3, 4, 5, 6	17, 28	129	echo of request
50	1	Time and Date	2(Write)	07 (Quantity = 1)	129	07 (quantity = 1)

OBJECT		REQUEST (Library will parse)		RESPONSE (Library will respond with)		
Object	Variation	Description	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
60	1	Class 0 Data	1	06	129	
60	2	Class 1 Data	1	06,07,08	129	
			20 (Enable Unsolicited), 21,(Disable Unsolicited)	06		
60	3	Class 2 Data	1	06,07,08	129	
			20 (Enable Unsolicited), 21,(Disable Unsolicited)	06		
60	4	Class 3 Data	1	06,07,08	129	
			20 (Enable Unsolicited), 21,(Disable Unsolicited)	06		
80	1	Internal Indications		00		
			2(write)	index=7		

8 DNP3 Server Properties

8.1 Device Profile

DNP3 Device Profile

This document defines the options of the DNP3 protocol used by ATOP DNP3 devices and is accompanied by an implementation table.

Vendor Name:

ATOP Technologies, Inc.

Device Name:

PG59XX Series DNP3 Server over Ethernet or Serial

Device Function:

- Master
- Outstation

DNP Levels Supported for:

- Request and Response
- None
- Level 1
- Level 2
- Level 3
- Level 4

Supported Function Blocks:

- Self-Address Support
- Data Sets
- File Transfer
- Virtual Terminals
- Mapping to IEC61850 Object Models
defined in a DNP3 XML file
- Function code 31, activate configuration
- Authentication

Connections Supported:

- Serial
- IP Networking

Serial Connections:

Serial Connection Parameters:

- Asynchronous – 8 Data Bits, 1 Start Bit, 1 Stop Bit, No Parity

Baud Rate:

- fixed
- Configurable – 110 to 115200

Flow Control:

- None
- Hardware flow control
- Software flow control

Interval to Request Link Status:

- Not supported
- Fixed at seconds
- Configurable – 0 to 2147483647

Supports DNP3 Collision Avoidance:

- No
- Yes, using back-off time = (Min + Random) method

<p>Receiver Inter-character Timeout: Not checked No gap permitted Fixed a bit times Fixed a ms ■ Configurable– 0 to 60000</p> <p>Inter-character Gap in Transmission: ■ None Maximum bit times Maximum ms</p>	
<p>IP Networking: Type of End Point: ■ TCP Listening ■ UDP datagram</p> <p>TCP Listen Port Number: Fixed at 20000 ■ Configurable, range 1 to 65535 (default 20000)</p> <p>TCP Keep-alive timer: ■ Fixed at 19000 ms Configurable, range _____ to _____ ms</p> <p>Local UDP Port: Fixed at 20000 ■ Configurable, range 1 to 65535 (default 20000)</p> <p>Multiple Master Connections: Not supported ■ Supports multiple masters (maximum is 5)</p> <p>Time Synchronization Support: Not supported DNP3 LAN Procedure ■ DNP3 Write Time</p>	
<p>Data Link Address: Fixed at ■ Configurable, range 0 to 65519 (default 1)</p>	<p>Self-Address Support using address 0xFFFC: ■ Yes No</p>
<p>Sends Confirmed User Data Frames: ■ Never Sometimes, explain Always</p>	<p>Data Link Layer Confirmation Timeout: ■ None Fixed at 2000 ms Configurable, range _____ to _____ ms</p>
<p>Maximum Data Link Retries: ■ Never Retries Fixed at 3 Configurable, range _____ to _____</p>	
<p>Maximum number of octets Transmitted in a Data Link Frame: ■ Fixed at 292 Configurable, range _____ to _____</p>	<p>Maximum number of octets that can be Received in a Data Link Frame: ■ Fixed at 292 Configurable, range _____ to _____</p>

Maximum number of octets Transmitted in an Application Layer Fragment: <input type="checkbox"/> Fixed at 2048 Configurable, range _____ to _____	Maximum number of octets that can be Received in an Application Layer Fragment: <input type="checkbox"/> Fixed at 249 Configurable, range _____ to _____		
Timeout waiting for Complete Application Layer Fragment: None <input type="checkbox"/> Fixed at 6000 ms Configurable, range _____ to _____ ms			
Timeout waiting for Application Confirm of solicited response message: <input type="checkbox"/> None Fixed at 6000 ms Configurable, range 0 to 2147483647 ms (default 10000)			
Requests Application Confirmation for event response and non-final fragments: <input type="checkbox"/> Yes No Configurable			
Sends Multi-Fragment Responses: <input type="checkbox"/> Yes No	Last Fragment Confirmation: <i>Always</i> <input type="checkbox"/> <i>Sometimes, Only when it contains events</i> <i>Never</i>		
Maximum number of objects allowed in a single control request for CROB (group 12): <input type="checkbox"/> <i>Fixed at 16</i> Configurable, range _____ to _____			
Maximum number of objects allowed in a single control request for Analog Outputs (group 41): <input type="checkbox"/> <i>Fixed at 16</i> Configurable, range _____ to _____			
Control Status Codes Supported: <table style="width: 100%; border: none;"> <tr> <td style="width: 50%; vertical-align: top;"> <input type="checkbox"/> 1 – TIMEOUT <input type="checkbox"/> 2 – NO_SELECT <input type="checkbox"/> 3 – FORMAT_ERROR <input type="checkbox"/> 4 – NOT_SUPPORTED <input type="checkbox"/> 5 – ALREADY_ACTIVE <input type="checkbox"/> 6 – HARDWARE_ERROR <input type="checkbox"/> 7 – LOCAL <input type="checkbox"/> 8 – TOO_MANY_OBJS <input type="checkbox"/> 9 – NOT_AUTHORIZED <input type="checkbox"/> 10 – AUTOMATION_INHIBIT </td> <td style="width: 50%; vertical-align: top;"> <input type="checkbox"/> 11 – PROCESSING_LIMITED <input type="checkbox"/> 12 – OUT_OF_RANGE <input type="checkbox"/> 13 – DOWNSTREAM_LOCAL <input type="checkbox"/> 14 – ALREADY_COMPLETE <input type="checkbox"/> 15 – BLOCKED <input type="checkbox"/> 16 – CANCELLED <input type="checkbox"/> 17 – BLOCKED_OTHER_MASTER <input type="checkbox"/> 18 – DOWNSTREAM_FAIL <input type="checkbox"/> 126 – RESERVED <input type="checkbox"/> 127 – UNDEFINED </td> </tr> </table>		<input type="checkbox"/> 1 – TIMEOUT <input type="checkbox"/> 2 – NO_SELECT <input type="checkbox"/> 3 – FORMAT_ERROR <input type="checkbox"/> 4 – NOT_SUPPORTED <input type="checkbox"/> 5 – ALREADY_ACTIVE <input type="checkbox"/> 6 – HARDWARE_ERROR <input type="checkbox"/> 7 – LOCAL <input type="checkbox"/> 8 – TOO_MANY_OBJS <input type="checkbox"/> 9 – NOT_AUTHORIZED <input type="checkbox"/> 10 – AUTOMATION_INHIBIT	<input type="checkbox"/> 11 – PROCESSING_LIMITED <input type="checkbox"/> 12 – OUT_OF_RANGE <input type="checkbox"/> 13 – DOWNSTREAM_LOCAL <input type="checkbox"/> 14 – ALREADY_COMPLETE <input type="checkbox"/> 15 – BLOCKED <input type="checkbox"/> 16 – CANCELLED <input type="checkbox"/> 17 – BLOCKED_OTHER_MASTER <input type="checkbox"/> 18 – DOWNSTREAM_FAIL <input type="checkbox"/> 126 – RESERVED <input type="checkbox"/> 127 – UNDEFINED
<input type="checkbox"/> 1 – TIMEOUT <input type="checkbox"/> 2 – NO_SELECT <input type="checkbox"/> 3 – FORMAT_ERROR <input type="checkbox"/> 4 – NOT_SUPPORTED <input type="checkbox"/> 5 – ALREADY_ACTIVE <input type="checkbox"/> 6 – HARDWARE_ERROR <input type="checkbox"/> 7 – LOCAL <input type="checkbox"/> 8 – TOO_MANY_OBJS <input type="checkbox"/> 9 – NOT_AUTHORIZED <input type="checkbox"/> 10 – AUTOMATION_INHIBIT	<input type="checkbox"/> 11 – PROCESSING_LIMITED <input type="checkbox"/> 12 – OUT_OF_RANGE <input type="checkbox"/> 13 – DOWNSTREAM_LOCAL <input type="checkbox"/> 14 – ALREADY_COMPLETE <input type="checkbox"/> 15 – BLOCKED <input type="checkbox"/> 16 – CANCELLED <input type="checkbox"/> 17 – BLOCKED_OTHER_MASTER <input type="checkbox"/> 18 – DOWNSTREAM_FAIL <input type="checkbox"/> 126 – RESERVED <input type="checkbox"/> 127 – UNDEFINED		
Supports Unsolicited Reporting: <input type="checkbox"/> <i>Not Supported</i> Configurable, selectable from On and Off			
Unsolicited Response Confirmation Timeout: Fixed at _____ ms Configurable, range 0 to 4294967295 ms	Number of Unsolicited Retries: Fixed at 5 Configurable, range _____ to _____		
Event Buffer Overflow Behavior: <input type="checkbox"/> Discard the oldest event Discard the newest event Other, explain _____			

Event Buffer Organization:

Per Object

■ *Per Class*

Class 1: *Fixed at* _____ ■ *Configurable, range 50 to 65535*
Class 2: *Fixed at* _____ ■ *Configurable, range 50 to 65535*
Class 3: *Fixed at* _____ ■ *Configurable, range 50 to 65535*

Single Buffer

Fixed at
Configurable, range _____ *to* _____

Outstation Unsolicited Response Trigger Conditions:

(Number of events)

class 1:	■ Not used to trigger Unsolicited Response	Fixed at	Configurable
class 2:	■ Not used to trigger Unsolicited Response	Fixed at	Configurable
class 3:	■ Not used to trigger Unsolicited Response	Fixed at	Configurable

8.2 Implementation Table

OBJECT		REQUEST (Library will parse)		RESPONSE (Library will respond with)		
Object	Variation	Description	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
1	0	Binary Input - All Variations (Variation 0 is used to request default variation)	1(Read), 22(Assign Class)	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129(Response)	00, 01 17, 28
1	1	Binary Input - Packed Format	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129,	00, 01 17, 28
1	2	Binary Input with Status	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129	00, 01 17, 28
2	0	Binary Input Change - All Variations (Default variation)	1	06,07,08	129	17, 2

OBJECT		REQUEST (Library will parse)		RESPONSE (Library will respond with)		
Object	Variation	Description	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
2	1	Binary Input Change without Time	1	06,07,08	129, 130 (Unsolicted Response)	17, 28
2	2	Binary Input Change with Time	1	06,07,08	129, 130	17, 28
2	3	Binary Input Change with Relative Time	1	06,07,08	129, 130	17, 28
3	0	Double-bit Binary Input - All Variations (Variation 0 is used to request default variation)	1(Read), 22(Assign Class)	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129(Response)	00, 01 17, 28
3	1	Double-bit Binary Input – Packed Format	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129,	00, 01 17, 28
3	2	Double-bit Binary Input	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129	00, 01 17, 28
4	0	Double-bit Binary Input Change - All Variations (Default variation)	1	06,07,08	129	17, 28

Object	Variation	Description	REQUEST (Library will parse)		RESPONSE (Library will respond with)	
			Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
4	1	Double-bit Binary Input Change without Time	1	06,07,08	129, 130 (Unsolicted Response)	17, 28
4	2	Double-bit Binary Input Change with Time	1	06,07,08	129, 130	17, 28
4	3	Double-bit Binary Input Change with Relative Time	1	06,07,08	129, 130	17, 28
10	0	Binary Output - All Variations	1(Read), 22(Assign Class)	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (index)	129	00, 01 17, 28
10	1	Binary Output	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (index)	129,	00, 01 17, 28
10	2	Binary Output Status	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (index)	129,	00, 01 17, 28

OBJECT		REQUEST <small>(Library will parse)</small>		RESPONSE <small>(Library will respond with)</small>		
Object	Variation	Description	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
12	0	Control Block - All Variations				
12	1	Control Relay Output Block	3(Select), 4(Operate), 5 (Direct Operate), 6 (Direct Operate NR)	17, 28	129	echo of request
20	0	Binary Counter - All Variations	1(Read), 22(Assign Class) 7(Immediate Freeze), 8 (Immediate Freeze - No Response), 9 (Freeze and Clear), 10 (Freeze and Clear – No Response)	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129	00, 01 17, 28
20	1	32-Bit Binary Counter	1,	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129,	00, 01 17, 28
20	2	16-Bit Binary Counter	1,	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129,	00, 01 17, 28

Object	Variation	OBJECT Description	REQUEST (Library will parse)		RESPONSE (Library will respond with)	
			Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
20	5	32-Bit Binary Counter without Flag	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129,	00, 01 17, 28
20	6	16-Bit Binary Counter without Flag	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129,	00, 01 17, 28
21	0	Frozen Counters - All Variations	1(Read), 22(Assign Class)	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129(Response)	00, 01 17, 28
21	1	32-Bit Frozen Counter	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129,	00, 01 17, 28

OBJECT		REQUEST (Library will parse)		RESPONSE (Library will respond with)		
Object	Variation	Description	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
21	2	16-Bit Frozen Counter	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (index)	129,	00, 01 17, 28
21	5	32-Bit Frozen Counter with Time of Freeze	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (index)	129,	00, 01 17, 28
21	6	16-Bit Frozen Counter with Time of Freeze	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (index)	129,	00, 01 17, 28
21	9	32-Bit Frozen Counter without Flag	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (index)	129,	00, 01 17, 28

Object	Variation	Description	REQUEST (Library will parse)		RESPONSE (Library will respond with)	
			Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
21	10	16-Bit Frozen Counter without Flag	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited qty) 17, 28 (index)	129,	00, 01 17, 28
22	0	Counter Change Event - All Variations	1	06,07,08	129	17, 28
22	1	32-Bit Counter Change Event without Time	1	06,07,08	129, 130	17, 28
22	2	16-Bit Counter Change Event without Time	1	06,07,08	129, 130	17, 28
22	5	32-Bit Counter Change Event with Time	1	06,07,08	129, 130	17, 28
22	6	16-Bit Counter Change Event with Time	1	06,07,08	129, 130	17, 28
23	0	Frozen Counter Events - All Variations	1	06,07,08	129	17, 28
23	1	32-Bit Frozen Counter Event without Time	1	06,07,08	129, 130	17, 28
23	2	16-Bit Frozen Counter Event without Time	1	06,07,08	129, 130	17, 28
23	5	32-Bit Frozen Counter Event with Time	1	06,07,08	129, 130	17, 28

OBJECT		REQUEST (Library will parse)		RESPONSE (Library will respond with)		
Object	Variation	Description	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
23	6	16-Bit Frozen Counter Event with Time	1	06,07,08	129, 130	17, 28
30	0	Analog Input - All Variations	1(Read), 22(Assign Class) 7(Immediate Freeze), 8 (Immediate Freeze - No Response), 9 (Freeze and Clear), 10 (Freeze and Clear – No Response)	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129(Response)	00, 01 17, 28
30	1	32-Bit Analog Input	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129,	00, 01 17, 28
30	2	16-Bit Analog Input	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129,	00, 01 17, 28

Object	Variation	Description	REQUEST (Library will parse)		RESPONSE (Library will respond with)	
			Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
30	3	32-Bit Analog Input without flag	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 (limited qty) 17, 28 (index)	129,	00, 01 17, 28
30	4	16-Bit Analog Input without flag	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 (limited qty) 17, 28 (index)	129,	00, 01, 17, 28
30	5	Single-precision float-point with flag	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 (limited qty) 17, 28 (index)	129,	00, 01, 17, 28
31	0	Frozen Analog Input - All Variations	1(Read), 22(Assign Class)	00, 01 (start-stop) 06 (no range, or all) 07, 08 (limited qty) 17, 28 (index)	129(Response)	00, 01, 17, 28

OBJECT		REQUEST <small>(Library will parse)</small>		RESPONSE <small>(Library will respond with)</small>	
Object	Description	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
31	32-Bit Frozen Analog Input	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited q1x) 17, 28 (index)	129,	00, 01, 17, 28
31	16-Bit Frozen Analog Input	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited q1x) 17, 28 (index)	129,	00, 01, 17, 28
31	32-Bit Frozen Analog Input with Time of Freeze	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited q1x) 17, 28 (index)	129,	00, 01, 17, 28
31	16-Bit Frozen Analog Input with Time of Freeze	1	00, 01 (start-stop) 06 (no range, or all) 07, 08, (limited q1x) 17, 28 (index)	129,	00, 01, 17, 28

Object	Variation	Description	REQUEST (Library will parse)		RESPONSE (Library will respond with)	
			Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
31	5	32-Bit Frozen Analog Input without Flag	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 (limited qty) 17, 28 (index)	129,	00, 01, 17, 28
31	6	16-Bit Frozen Analog Input without Flag	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 (limited qty) 17, 28 (index)	129,	00, 01, 17, 28
31	7	Single-precision float-point with flag	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 (limited qty) 17, 28 (index)	129,	00, 01, 17, 28
32	0	Analog Change Event - All Variations	1	06,07,08	129	17, 28
32	1	32-Bit Analog Change Event without Time	1	06,07,08	129, 130	17, 28
32	2	16-Bit Analog Change Event without Time	1	06,07,08	129, 130	17, 28

Object	Variation	Description	REQUEST (Library will parse)		RESPONSE (Library will respond with)	
			Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
32	3	32-Bit Analog Change Event with Time	1	06,07,08	129, 130	17, 28
32	4	16-Bit Analog Change Event with Time	1	06,07,08	129, 130	17, 28
32	5	Single-precision float –point Analog Change Event without Time	1	06,07,08	129, 130	17, 28
32	7	Single-precision float –point Analog Change Event with Time	1	06,07,08	129, 130	17, 28
33	0	Frozen Analog Event - All Variations	1	06,07,08	129	17, 28
33	1	32-Bit Frozen Analog Event without Time	1	06,07,08	129, 130	17, 28
33	2	16-Bit Frozen Analog Event without Time	1	06,07,08	129, 130	17, 28
33	3	32-Bit Frozen Analog Event with Time	1	06,07,08	129, 130	17, 28
33	4	16-Bit Frozen Analog Event with Time	1	06,07,08	129, 130	17, 28
33	5	Single-precision float –point Frozen Analog Change Event without Time	1	06,07,08	129, 130	17, 28
33	7	Single-precision float –point Frozen Analog Change Event with Time	1	06,07,08	129, 130	17, 28

OBJECT		REQUEST <small>(Library will parse)</small>		RESPONSE <small>(Library will respond with)</small>		
Object	Variation	Description	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
40	0	Analog Output Status - All Variations	1(Read), 22(Assign Class)	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129(Response)	00, 01, 17, 28
40	1	32-Bit Analog Output Status	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129,	00, 01, 17, 28
40	2	16-Bit Analog Output Status	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129,	00, 01, 17, 28
40	3	Single-precision float-point Analog Output Status	1	00, 01 (start-stop) 06 (no range, or all) 07, 08 ,(limited qty) 17, 28 (index)	129,	00, 01, 17, 28

Object	Variation	Description	REQUEST (Library will parse)		RESPONSE (Library will respond with)	
			Application Layer Function Codes (Decimal)	Qualifier Codes (hex)	Application Layer Function Codes (Decimal)	Qualifier Codes (hex)
41	1	32-Bit Analog Output Block	3, 4, 5, 6	17, 28	129	echo of request
41	2	16-Bit Analog Output Block	3, 4, 5, 6	17, 28	129	echo of request
41	3	Analog Output – Single-precision float – point	3, 4, 5, 6	17, 28	129	echo of request
50	1	Time and Date	2(Write)	07 (Quantity = 1)	129	07 (quantity = 1)
60	1	Class 0 Data	1	06	129	
60	2	Class 1 Data	1	06,07,08	129	
			20 (Enable Unsolicited), 21,(Disable Unsolicited)	06		
60	3	Class 2 Data	1	06,07,08	129	
			20 (Enable Unsolicited), 21,(Disable Unsolicited)	06		
60	4	Class 3 Data	1	06,07,08	129	
			20 (Enable Unsolicited), 21,(Disable Unsolicited)	06		
80	1	Internal Indications		00 index=7		



ATOP Technologies, Inc.

www.atoponline.com
www.atop.com.tw

TAIWAN HEADQUARTERS

2F, No. 146, Sec. 1, Tung-Hsing Rd,
30261 Zhubei City, Hsinchu County
Taiwan, R.O.C.
Tel: +886-3-550-8137
E-mail: info@atop.com.tw
Fax: +886-3-550-8131

ATOP INDIA OFFICE & GLOBAL INQUIRIES

Prashant Mishra
No. 3M-217, East of NGEF Layout, Kasturi Nagar,
Bengaluru- 560043, Karnataka, India
Tel: +91-80-492-06308
E-mail: prashant.m@atop.com.tw

ATOP CHINA BRANCH

Sam Xia
3F, 75th, No. 1066 Building,
Qingzhou North Road,
Shanghai, China
Tel: +86-21-64956231
E-mail: info@atop.com.tw

ATOP INDONESIA OFFICE

Anisah Ambarwati
Wisma Slipi, Kav. 12 Lt. 3 Unit 308
Jl. Let. Jend. S. Parman 11480 - Indonesia
Tel: +6221-5326171
E-mail: anisah@atop.com.tw

ATOP JAPAN OFFICE

易傑 Takashi Eki
東京都千代田区丸の内 1-1-3
日本生命丸の内ガーデンタワー3F
Tel: +81-3-4530-3390
E-mail: eki@atop.com.tw

ATOP COLOMBIA OFFICE

Brenda Solano Sarmiento
Calle 35 No. 19 - 41 - Oficina 315 Torre Norte,
Bucaramanga, Santander, Colombia
Tel: +57 322 848 9815
E-mail: brenda.solano@atop.com.tw

ATOP VIETNAM CONTACT

Jenny Duong
Tel: +84 93 275 18 52
E-mail: jenny.duong@atop.com.tw

ATOP NORTH AMERICA CONTACT

Sam Leong
Tel: +1 323 315 0484
E-mail: samleong@atop.com.tw

ATOP EUROPE CONTACT

Timur Dautov
Tel: +48 690 261 220
E-mail: timur@atop.com.tw